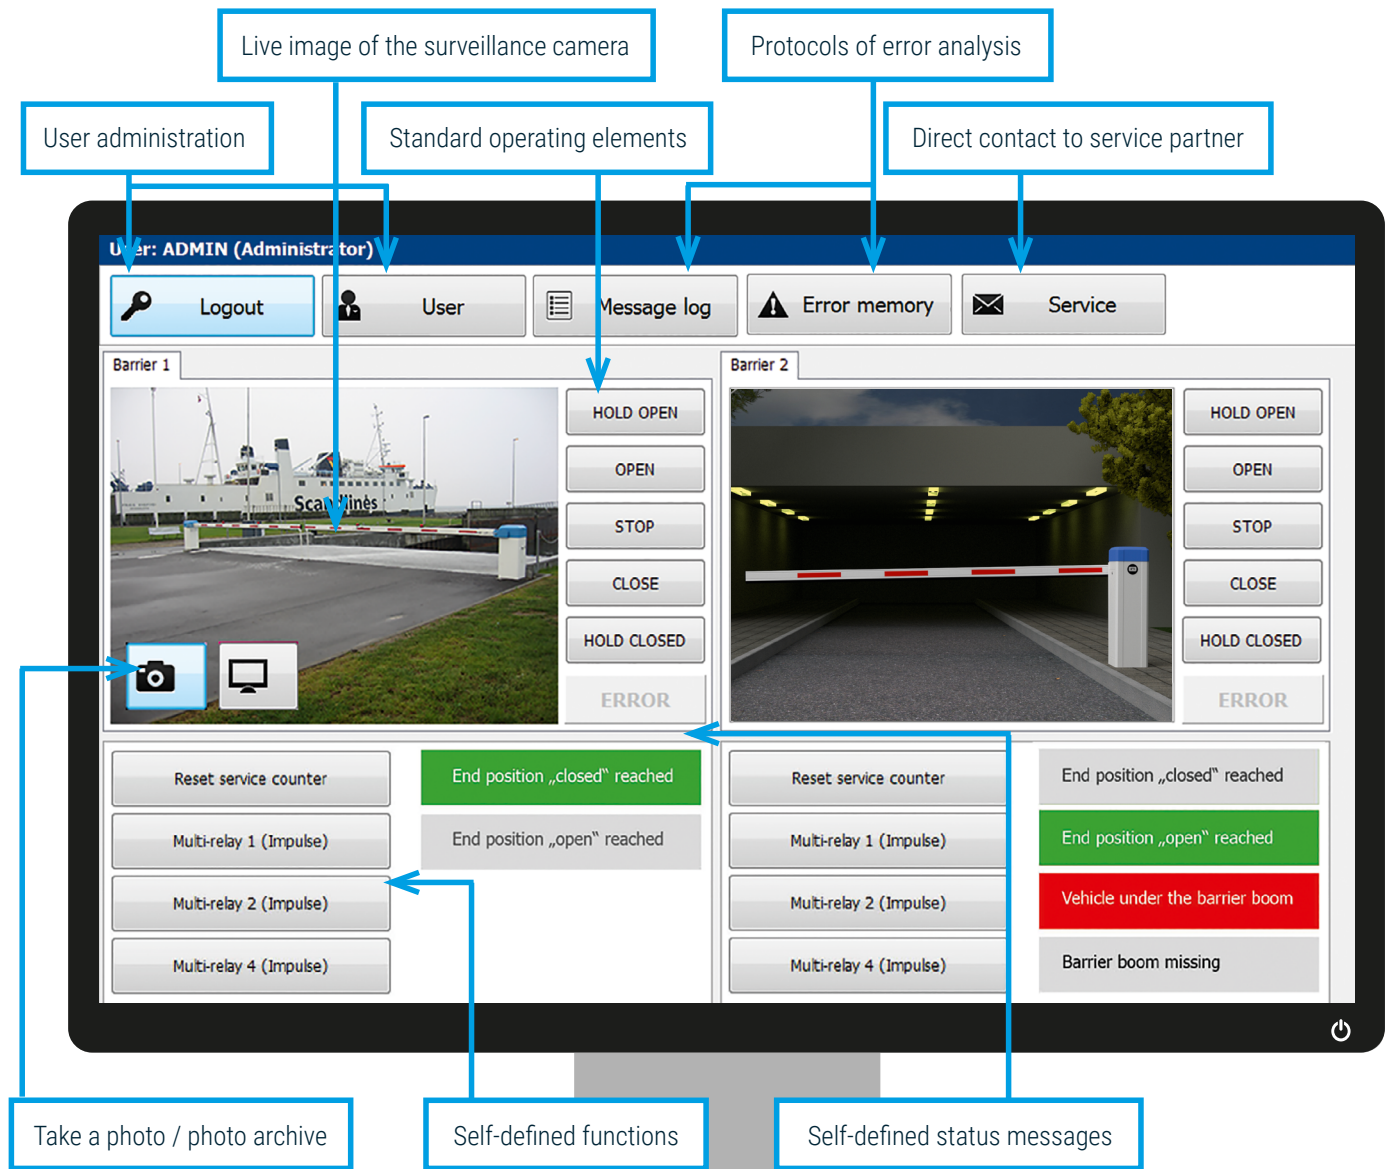**Easy Control Operator**

Desktop Panel Software

ELKA

The right software for porters

The software Easy Control (patent pending) is designed to configure, control and monitor ELKA barriers with the motor control „MO 24" or „MO 64 Plus". Up to 16 ELKA barriers can be monitored and controlled simultaneously via the desktop panel software Easy Control Operator. Configured messages inform you automatically via SMS or email.

Live image of the surveillance camera

Protocols of error analysis

User administration

Standard operating elements

Direct contact to service partner

User: ADMIN (Administrator)

| Logout | User | Message log | ⚠ Error memory | ✉ Service |

Barrier 1

HOLD OPEN
OPEN
STOP
CLOSE
HOLD CLOSED
ERROR

Barrier 2

HOLD OPEN
OPEN
STOP
CLOSE
HOLD CLOSED
ERROR

Reset service counter	End position „closed" reached
Multi-relay 1 (Impulse)	End position „open" reached
Multi-relay 2 (Impulse)	
Multi-relay 4 (Impulse)	

Reset service counter	End position „closed" reached
Multi-relay 1 (Impulse)	End position „open" reached
Multi-relay 2 (Impulse)	Vehicle under the barrier boom
Multi-relay 4 (Impulse)	Barrier boom missing

Take a photo / photo archive

Self-defined functions

Self-defined status messages

Monitoring barriers

Monitor up to 16 barriers with one PC.
TIP: Via the service button an email is generated with error memories and barrier configurations as attachment

Surface depending on requirements

Configure an individual surface for your requirements out of more than 40 control functions and more than 70 status messages.

Record camera images

Photos can automatically be recorded during status changes.
TIP: For example to identify the responsible person during message „Boom missing".

SMS / Email messages

Receive all status messages automatically as e-mail or SMS (registration with an external service provider required).
TIP: A current camera image can be sent with the email.

Differential counter (optional)

Manage your parking spaces and always be informed about how many parking spaces are free or occupied.
TIP: For example, you can reset the differential counter time-controlled via the yearly timer.

Yearly timer (optional)

Control all barriers in a network automatically via the yearly timer.
TIP: You may for example close the barrier automatically after working hours.

✉ info@elka.eu   📞 +49(0)4861-9690-0

🌐 www.elka.eu   🖶 +49(0)4861-9690-90

We reserve the right to make technical alterations.

ELKA

ELKA-Torantriebe GmbH u. Co. Betriebs KG

Dithmarscher Str. 9, 25832 Tönning / Germany

✉ info@elka.eu   📞 +49(0)4861-9690-0

🌐 www.elka.eu   🖶 +49(0)4861-9690-90

We reserve the right to make technical alterations.